


PARTS LIST

OZ1120GD-01	Knob (OZ9003)
OZ1120GD-02	Spindle
OZ1120GD-03	Spindle "O" rings (OZ1992)
OZ1120GD-04	Stainless Steel Drip Tray
OZ1120GD-05	Trivet
OZ1120GD-06	Hotplate Burner 0.80mm Jet, Grill Burner 0.70mm Jet
OZ1120GD-07	Burner
OZ1120GD-08	Windshield
OZ1120GD-09	Grill tray & rack
OZ1120GD-10	Grill burner
OZ1120GD-11	Radiant mesh
OZ1120GD-12	Backing frame
OZ1120GD-13	Lid latches
OZ4716LP	Regulator with flexible hose

CONTROL KNOB

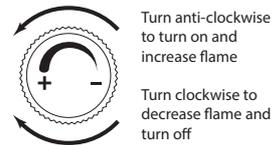

FITTING & USAGE INSTRUCTIONS

1. Remove from the carton and discard all packaging material.
 2. Place on a level (horizontal) surface.
 3. Open the lid and side windshields and lock them into place.
 4. Lift the trivet, remove the hose and regulator and connect it to the inlet connection. Tighten firmly by hand.
 5. Make sure the valves are turned off on both the appliance and gas cylinder prior to connecting or removing the stove.
 6. Firmly fasten the regulator to the gas cylinder control valve.
 7. Ensure the controls on the stove are in the OFF position. Turn the gas cylinder control valve on. Check for leaks at all gas joints by applying a soapy water solution.
 8. If a leak is detected by observing a stream of bubbles or by the distinct gas odour, turn off the cylinder valve and do not use the appliance until the source of the leak has been successfully fixed. Re-test for leaks each time before igniting the appliance.
 9. To light hotplate burner, turn each burner control on individually and light the gas at the burner using a match.
 10. To light grill, hold a match next to the grill burner and turn on (anti-clockwise) the middle control knob. Ensure both sides of the burner are alight. When lit adjust the burner to suit. To light the pot burners place a lit match beside the burner and turn the control in front of the required burner anti clockwise. If any burner fails to light, turn off the gas supply and wait 5 minutes before reattempting to ignite the burner.
 11. Use the stove control knobs to obtain the desired heat setting by turning anti-clockwise to increase the heat and clockwise to decrease the heat.
 12. To extinguish turn off the gas at the cylinder control valve. Allow all residual gas to disperse before turning the appliance controls to the off position.
- When alight, the gas stove should never be left unsupervised.
 - Do not move the appliance during operation.
 - During use, parts of the stove can reach high temperatures. After use, allow stove to cool before handling.
 - The burner extinguishing during use may indicate that the gas cylinder has run out of gas. If this occurs replace the empty gas cylinder with a full gas cylinder and attempt to reignite the burners. If the burners do not ignite there may be a blockage in the jets or the hose or regulator. Replace the components as required to make the appliance serviceable or take the appliance to a service centre to be professionally repaired.
 - After use, turn the gas cylinder valve off, wait for the flame to go out, then turn the appliance control valve(s) off.
 - To ensure maximum life from your appliance it should always be stored in a dry place, out of direct sunlight.
 - To check if gas cylinder contains gas, disconnect from the cooker, then hold upright and shake from side to side. If you can feel or hear liquid movement from within the cylinder, it contains gas.
 - Before each use, check primary air openings and clear blockages.
 - Abnormal operation which may require service can be identified by black sooting of cooking utensils, or an irregular burner flame which is yellow or unstable.

SERVICING (JET REPLACEMENT, BURNER CLEANING)

Should there be a problem with the stove, the jet may require cleaning or replacing.

1. Remove trivet. Insert a screwdriver through trivet holes in drip tray and remove 4 screws between stove body and base. An adjustable spanner may be required to hold the nuts underneath.
2. Unscrew the burner and remove it from the manifold.
3. Inspect the internal areas of the burner for signs of liquid (a torch may be useful). If liquid is evident shake the burner vigorously and then leave standing for the remainder to evaporate. When dry replace burner and attempt to light the burner. If the burner fails to light the jet may need to be replaced.
4. Using a spanner, unscrew the jet slowly to the right (when facing the knob).
5. Blow out the blockage, or wash jet in white spirits. Do not use needles or pins to clean the jet. Damage could result making the gas stove dangerous.
6. Firmly screw the jet back in place.
7. Replace the burner into position and screw it in. Place the body back on the base and replace all 4 screws.

If the blockage cannot be removed, replace the injector. Jet Service pack CM1980 (Pot Burners), CM1970 (Grill Burner).

REPLACING 'O' RINGS

Gas leaking from the front of the control indicates that the "O" Rings MUST be replaced before igniting the appliance.

1. Turn off all controls on the appliance as well as the cylinder.
2. Disconnect the flexible hose from the appliance and the cylinder.
3. Remove the control knob by pulling forward away from the stove.
4. Remove the control locking nut located directly behind the control knob by rotating in an anti-clockwise direction.
5. Remove the control spindle by rotating in an anti-clockwise direction.
6. Remove the damaged "O" Rings from the spindle and replace with new ones.
7. Reassemble in the opposite order of disassembly. Note: Push in spindle before turning clockwise.

"O" Ring (Spindle) Service Pack CM1992.

MAINTENANCE

This appliance does not require regular maintenance, however each time before use it should be verified that it is in a suitable working condition. If any faults are detected the appliance is not to be used until they have been rectified.

SPECIFICATIONS

Consumption Rate:	125 g/h (6.3mJ/h) per burner, 90g/h (4.5mJ/h) grill
Jet size:	Burner 0.80mm, Grill 0.70
Operating Pressure:	LPG 2.75kPa.
For use with:	LPG

This appliance shall only be used with a propane gas cylinder certified to Australian Standard AS2030.


IT MAY BE HAZARDOUS TO ATTEMPT TO FIT OTHER TYPES OF GAS CYLINDERS.

WARNINGS

- **ONLY USE OUTDOORS IN WELL VENTILATED AREAS, NEVER USE INDOORS.**
- **CARBON MONOXIDE HAZARD – THIS APPLIANCE CAN PRODUCE CARBON MONOXIDE WHICH HAS NO ODOUR. USING IT IN AN ENCLOSED SPACE (FOR EXAMPLE CARAVAN, TENT, CAR, MOBILE HOME, DOMESTIC RESIDENCE) MAY CAUSE DEATH.**
- This appliance shall only be used in an above ground open air situation with natural ventilation, without stagnant areas, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection.
- **CAUTION:** Accessible parts may be very hot. Keep young children away.
- Do not modify this appliance.
- Check that the seals between the appliance and the gas cylinder are in place and in good condition before connecting to the gas cylinder.
- Do not use this appliance if it has damaged or worn seals.
- Do not use this appliance if it is leaking, damaged or does not operate properly.
- Stove must be completely extinguished before disconnecting from cylinder.
- If there is a leak on your appliance (smell of gas), immediately attempt to turn off the cylinder valve. **DO NOT LIGHT THE APPLIANCE.** Remove the appliance to a well ventilated location away from any ignition source. Only check for leaks outdoors using soapy water. Do not try to detect leaks using a flame.
- Never lift the appliance while it is in use.
- This appliance shall be used away from flammable materials.
- This appliance is not to be used within 1200mm from any combustible materials (i.e. 1200mm clearance in all horizontal or vertical directions).
- Wipe with a moist cloth. Do not use abrasive cleaning products or chemicals.
- This appliance must only be serviced by an authorised person.
- Gas cylinders shall be changed in a well ventilated location, preferably outside away from people and any sources of ignition, such as naked flames, pilot lights, electric heaters/equipment.
- Only use the hose & regulator assembly supplied with the appliance for direct connection to the cylinder – **DO NOT USE ADAPTORS.** When necessary only use genuine replacement hose not exceeding 1500mm in length.
- When not in use store the appliance in the folded position in a well ventilated dry location.
- Avoid twisting or kinking the flexible hose.

The following figures are diagrammatical representations of suitable outdoor areas in which this appliance can be used.

- This appliance shall only be used in an above ground open air situation with natural ventilation, without stagnant areas, where gas leakage and products from combustion are readily dispersed by wind and natural convection.
- When not in use store the gas cylinder outdoors in a well ventilated area out of reach of children, Any indoor storage shall comply with AS/NZS 1596.
- Store this appliance when not in use disconnected from the gas cylinder.

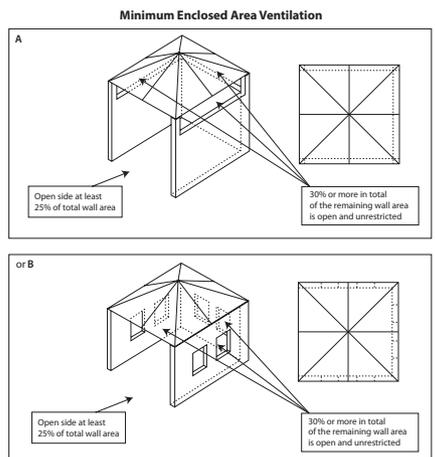



ONE YEAR WARRANTY

OZtrail warrants this product against defects for a period of one year from the date of purchase. OZtrail will repair or replace the product, at its discretion, should a warrantable defect arise within the warranty period. If the exact model is unavailable a model of equivalent nature will be substituted at our discretion. This warranty excludes faults and failures caused by improper use and abuse; fair wear and tear; or failure to follow instructions regarding care and maintenance. Products used for a commercial nature are not covered by this warranty against defects. A warranty may be claimed by returning the product to its place of purchase, with a detailed proof-of-purchase clearly showing the date and detail of the purchase.

You may also contact OZtrail Leisure Products, by phone: +64 7 3193 1110, or in writing: PO Box 1110, Eagle Farm BC, 4009, QLD, AUSTRALIA, by email: warranty@oztrail.com.au. The benefits under OZtrail's warranty against defects are in addition to other rights and remedies under law in relation to goods.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For more detailed information and an explanation of these terms see www.oztrail.com.au/warranty

OZTrail Leisure Products

71 Charles Ulm Place

EAGLE FARM, QLD, 4009, AUSTRALIA

TEL: 07 3193 1110

Made in China



Double Burner Grill

Instruction Manual



A.G.A. APPROVED No: 7280

MODELS OGP-DBGLP-A (OZ1120GD)

IMPORTANT: Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference.

www.oztrail.com.au