

# OWNERS MANUAL



## Vertex 2

OLT-VER2-D

### INSTRUCTIONS

#### Setup

1. Select a sheltered level campsite free from sticks, rocks and roots. Make sure it is well drained. Avoid large or old overhead branches and do not camp at the base of a cliff.
2. Unpack and separate the contents of the carry bag.
3. Assemble the poles. Layout the tent facing the desired direction.
4. Peg out the inner tent firm but not tight using the 4 peg down points, checking the floor is of an even tension without wrinkles.
5. Select the two long poles and slide through the sleeves that run diagonally across the tent from corner to corner. Slide the remaining pole through the sleeve that runs from side to side across the tent.
6. Carefully position the pole tips into the eyelets in the webbing tabs. Attach the J hooks to the poles. The inner tent will stand up during this process.
7. Now select the fly and open out flat and align correctly with the inner tent. Note that there are Velcro® tabs on the inside of the fly. Place the fly over the inner tent. Inside the fly wrap the Velcro® tabs around the poles and press the tabs together. Connect the buckle clips on the fly to the buckle sockets on the inner tent.
8. Peg out all the remaining anchor points including the vestibule and all the guy ropes firmly for weatherproof security.

#### Disassembly

1. Simply reverse the above process.

#### Repack into carry bag

1. Lay out the Fly in a roughly rectangular shape.
2. Fold it towards the centre along the long axis until the width of the folded rectangle is equal to length to the folded poles in their carry bag.
3. Repeat step 2 for the inner tent.
4. Place the folded fly on top of the folded inner tent and using the poles in their carry bag as a rolling pin, roll up the tent and fly around the poles.
5. Pack into carry bag. It may be necessary to repeat step 4 to remove enough air to easily fit into carry bag.

#### Prolonging the life of your tent

Lightweight tents are portable, temporary shelters avoid leaving in the sun for prolonged periods.

Inspect your camp site and clear any objects that could damage your tent floor.

Always air your tent until it is totally dry after your trip. Never pack it away when damp or dirty.

Use mild soap and water to clean tent and fly. After beach use or wet conditions treat all zips, poles and pegs with silicon spray.

#### Materials:

Poles: Aluminium Tent: Polyester

## CHECKLIST OF CONTENTS

- 1 x Compression dry-sac, 39x17cm
- 3 x Durallium™ Alloy pole
- 12 x 16mm Pegs
- 1 x Tent skin
- 1 x Gear loft
- 1 x Fly
- 4 x Guy ropes pre-attached
- 1 x Pole bag
- 1 x Peg bag

## WARRANTY

OZtrail warrants this product against defects for a period of two years from the date of purchase. OZtrail will repair or replace the product, at its discretion, should a warrantable defect arise within the warranty period. If the exact model is unavailable a model of equivalent nature will be substituted at our discretion. This warranty excludes faults and failures caused by improper use and abuse; fair wear and tear; or failure to follow instructions regarding care and maintenance. Products used for a commercial nature are not covered by this warranty against defects. A warranty may be claimed by returning the product to its place of purchase, with a detailed proof-of-purchase clearly showing the date and detail of the purchase. You may also contact OZtrail Leisure Products, by phone: 07 3193 1110, or in writing: PO Box 1110, Eagle Farm QLD 4009, by email: [warranty@oztrail.com.au](mailto:warranty@oztrail.com.au). The benefits under OZtrail's warranty against defects are in addition to other rights and remedies under law in relation to goods.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For more detailed information and an explanation of these terms see [www.oztrail.com.au/warranty](http://www.oztrail.com.au/warranty)

**IMPORTANT** – OZtrail advises to read your owner's manual fully and assemble your tent before going camping to ensure all parts are present and to become familiar with the assembly of your tent.

**PLEASE NOTE** – Accessories shown may be for display purposes only and not included with the product. Due to our policy of continual product development, specifications and features of this product may vary from what is stated.

See our website for the full OZtrail range or

 [facebook.com/OZtrailAustralia](https://facebook.com/OZtrailAustralia).

Made in Bangladesh  
Designed & Imported by:  
**OZtrail Leisure Products**  
71 Charles Ulm Place, Eagle Farm  
QLD 4009, AUSTRALIA